## **INSTALLATION**



WARNING: Always shut off the electrical power supply before working on the appliance.

- 1. Refer to the typical mounting positions (Figures 1 to 5) for proper placement of the filter cabinet.
- 2. Remove the metal filter cabinet from the carton and plastic bag.
- 3. Remove the access panel door and pull the media filter (in plastic bag) out of the cabinet. DO NOT install the media filter with the plastic bag around it.
- 4. Position cabinet so access panel is available for easy media filter replacement The access panel MUST be accessible to remove and replace the media filter. (NOTE: Minimum of twenty-six (26) inches for front clearance).
- 5. Position the filter cabinet onto return air side of the appliance (Figures 1 to 5). Duct transitions may be required to properly mount the filter cabinet.
- 6. When the filter cabinet is mounted directly to the appliance or existing duct, mark the inside opening of the filter cabinet and all 12 mounting screw locations.
- 7. Drill the marked mounting holes with a  $\frac{1}{8}$ " diameter drill bit. Remove the marked filter opening with metal cutting shears or equivalent.
- 8. Attach filter cabinet to the appliance or duct work using #8 X ½" long sheet metal screws or pop rivets. Seal the housing connections with aluminum duct tape or equivalent.
- 9. Remove media filter from the plastic bag and discard the plastic bag. TIP: Write the installation date on filter next to directional arrow for future filter replacement reference. The media filter MUST be installed WITHOUT the plastic bag.
- 10. Install media filter into the filter cabinet.
- 11. Install the filter cabinet access panel.
- 12. Place appliance back into service. Appliance must operate within the appliance manufacturer's recommended temperature and pressure drop requirements.

## **MAINTENANCE**

The media filter MUST be replaced periodically. The reason is to maintain appliance operating efficiency by minimizing pressure drop through the HVAC system. The frequency of filter media replacement depends on the operational environment. The need for replacement is easily determined by a visual inspection. NOTE: For optimum performance, replace the media filter every 6 to 12 months.

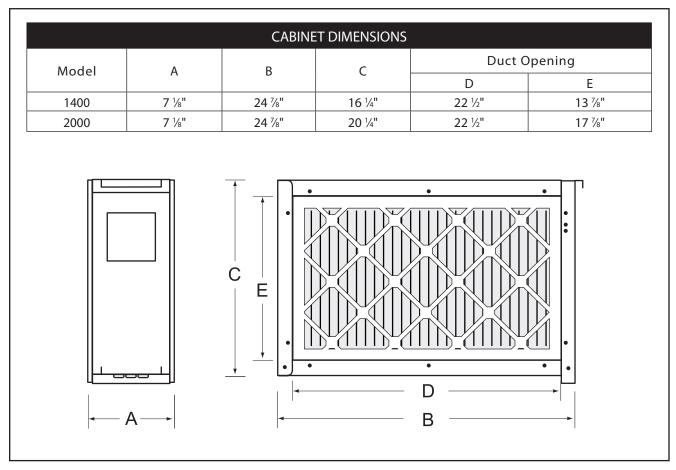


Figure 7